

## How to enable laser warmup in JobControl

First open the machine lid and manually locate the laser head in a central location (X & Y).

Next power on the laser and open the laser software JobControl





Then connect in JobControl




Once connected, navigate to Options within JobControl - This can be done in 2 ways as per below images.

TROTEC JobControl® 11.3.0 - [Plate1]

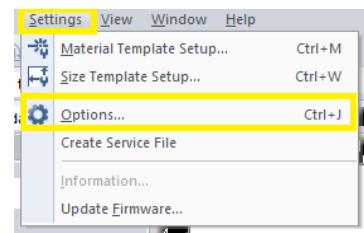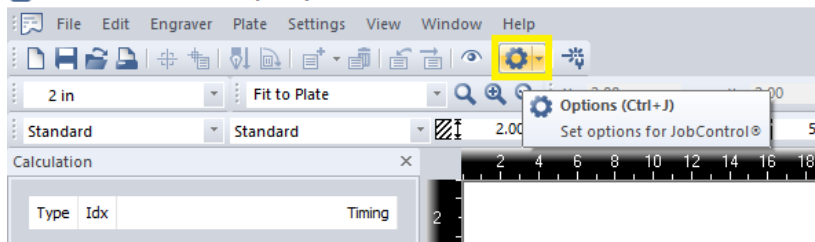

Once in JobControl Settings navigate to Service/Laser & tick the box “Enable automatic laser warm up” (default time is 60mins) press apply and then OK

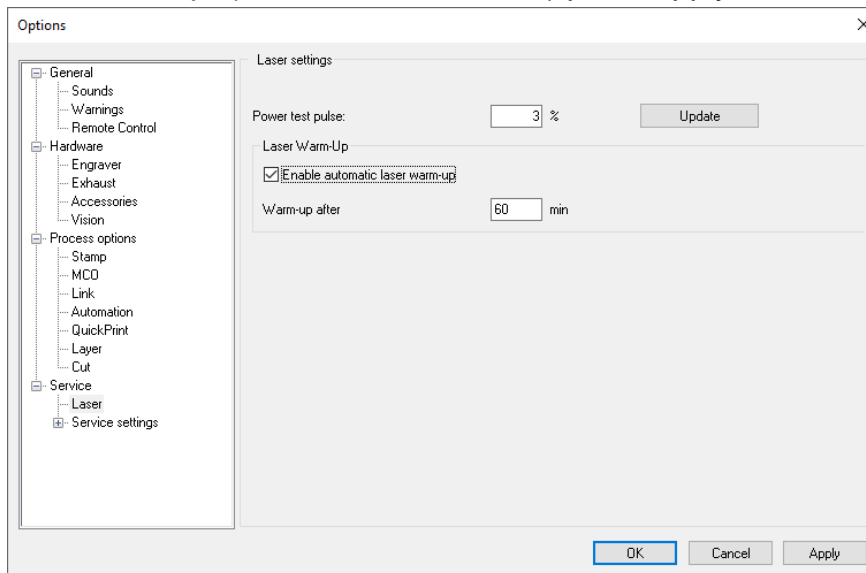

Once completed the machine lid can be closed and will reference as per normal start-up and operate as normal. The machine will give an audible beep to show it is warming up as required.

Call 1300 876 832 for support or visit [www.troteclaser.com.au](http://www.troteclaser.com.au)