

Preparing your Trotec laser for operation after a prolonged break

1. Ensure room temperature is 15-25 degrees Celcius
2. Open machine lid
3. Centralise the laser head (x & y)
4. Clean optics
5. Clean dust from fan on laser source and power supplies
6. Power on machine (with lid open)
7. Connect to JobControl software
8. Switch laser warm up on (see guide)
9. Close machine lid
10. Wait for beep to sound
11. Machine references
12. Continue to work as normal

Call 1300 876 832 for support or visit www.troteclaser.com.au